
ROPS RIFLE HOLDER

MAXXTUFF.COM \cdot read instructions before use \cdot MTF104

Tools Required 10mm Wrench or Socket #2 Phillips Screwdriver

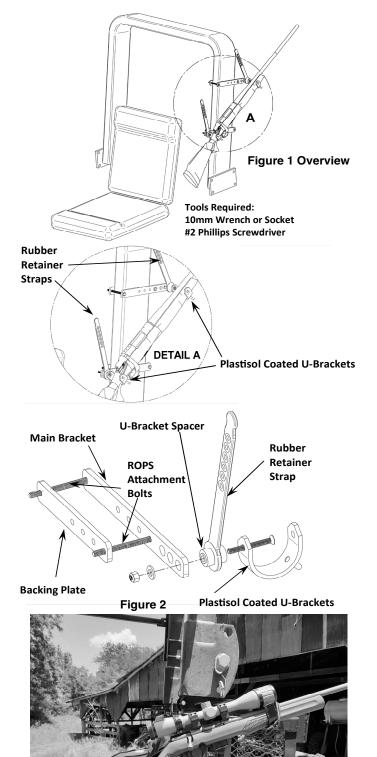

Step 1: Assembly of the Main Bracket

Note the u-bracket spacer has a small shoulder on one end. This goes into one of the three mounting position holes on the main bracket, depending on your needs. Any position will fit most firearms, but the outermost hole provides the most universal mount. Insert the u-bracket spacer through the rubber retainer strap as shown in Figure 2. Next, insert the M6 countersink machine screw through the u-bracket and through the spacer, then onto the main bracket. Use the flat washer and nylon insert locknut to secure this connection. The u-bracket will rotate to best cradle your buttstock or forearm stock.

Step 2: Attach the Bracket to your ROPS Bar

The ROPS bar will be sandwiched between the main bracket and backing plate as shown in Figure 2, Detail A. Place the 2 attachment bolts as close to the ROPS bar edge as possible for maximum grip. The vertical separation will determine the length between u-brackets and the upward angle of the firearm for safety in transport.

The photo shows a typical mounting arrangement. The rubber retainer straps have multiple grip holes for the security of your firearm.

WARNING

• Follow all firearm safety guidelines as outlined in any firearm safety training course and on the NRA website.

LIMITED WARRANTY (A) Warranty

MAXXTUFF warrants to the original retail purchaser that all products manufactured by it are free from defects in material & manufacturing at the time of shipment for twelve (12) months from the date of purchase. MAXXTUFF will repair or replace any part found defective if the unit claimed to be defective is returned to MAXXTUFF, postage prepaid, within the warranty period.

This warranty shall not apply to any product which has been subjected to misuse, misapplication, neglect (including but not limited to improper maintenance), accident, improper installation or assembly, modification (including but not limited to use of unauthorized parts or attachments), adjustment, or repair. THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED (INCLUDING THOSE OF MERCHANTABILITY & FITNESS OF ANY PRODUCT FOR A PARTICULAR PURPOSE), & OF ANY OTHER OBLIGATION OR LIABILITY ON THE PART OF THE COMPANY. (B) LIMITATION OF LIABILITY

It is expressly understood that MAXTUFF's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product, as stated above, & MAXTUFF's liability for any other injury, loss, damage or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material, arising in connection with the sale, installation & efficiency of the product. It shall not be obligated to make such alterations or modifications to product already in service.

©2024 MAXXTUFF

5724 US-280, Birmingham, AL 35242